 
 


U1

Fingerprint Bluetooth U-lock Quick start guide

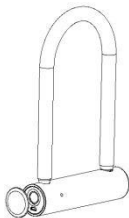

Please read the instructions carefully before use for quick use. The appearance color of the product is subject to the actual product!

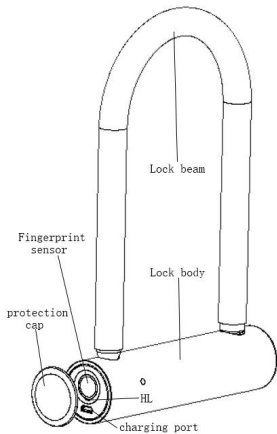

 
**一、Please change your Bluetooth password when
You use it for the first time.**

1. Scan code download fingerprint Bluetooth APP--E Lock





2. Open the APP, follow the prompts, and operate for the first time. Touch the fingerprint on the lock with your finger before connecting to activate the Bluetooth of the lock. Select your own lock in the list of Bluetooth that appears.



3. Select the U-lock in the list

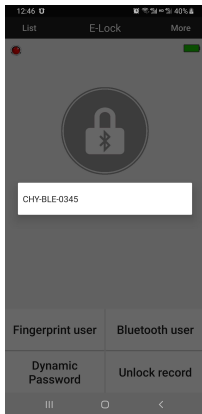

  4. Follow the prompts, the default password: 123456

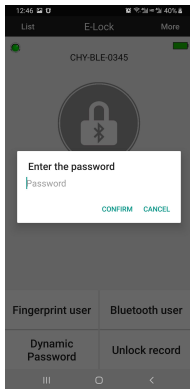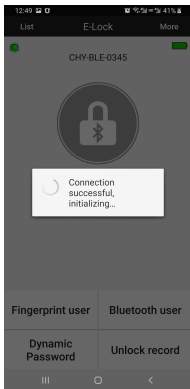

  5. Click the lock icon on the main interface as the switch lock.

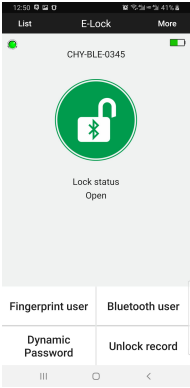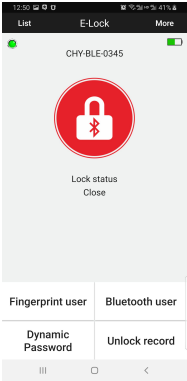


6. Bluetooth passwords cannot be the same.
7. Fingerprint username, a letter or an 8-digit number.
8. Click on the open log to see the unlock record;
9. Click More to change the factory default password immediately.

三、Remote share password unlock

1. The other party's mobile phone must also have an E Lock unlocking app.
2. Click the dynamic password, the dynamic password can be sent to the other party remotely, the other party connects to the Bluetooth lock, enter the dynamic password, you can unlock.
3. Temporary password is valid for fifteen minutes

四、Fingerprint entry

 
- . In the factory state, any finger can be unlocked.
- . The first fingerprint entered is the administrator
- . After setting the administrator's fingerprint, only the fingerprint has been entered to unlock it.
- . After entering the administrator's fingerprint, you need to unlock the administrator's fingerprint before you can enter a new fingerprint.
- . Up to 9 sets of fingerprints can be added

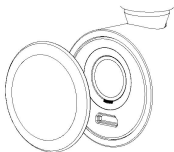

C

Blue light is on

 
1. Press the fingerprint sensor for 3 seconds

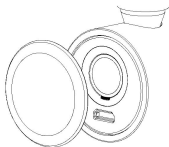

C

Blue light is on

 
2. Place admin image ten times

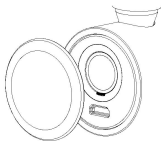

C

Blue light is on

 3. Long drop, recording successfully

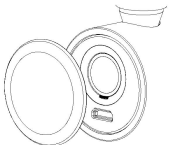


C

Red indicator light is on

4. Short four sounds, failed to enter

 
五、Enter user fingerprint

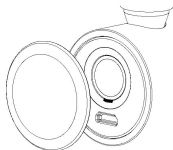

C

■ Blue light is on

 
1. Press the fingerprint sensor for 3 seconds

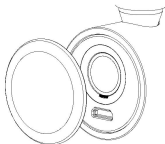

C

■ Blue light is on

 
2. Verify administrator fingerprint

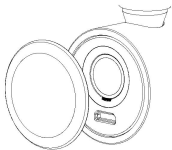

C

Blue light is on

 
3. Place user fingerprint ten times

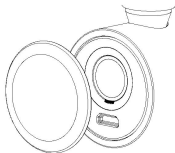

C

Blue light is on

 3. Long drop, recording successfully

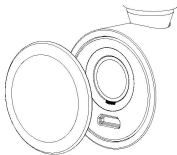

C

Red indicator light is on

4. Short four sounds, failed to enter

六、Delete all fingerprints

●.In any mode, press and hold the fingerprint for about 6 seconds, the blue light will be released after 2 times, and the red light will be on. At this time, the administrator will press the fingerprint. If the fingerprint recognition is normal, the blue light will be on, and the buzzer will beep once. All fingerprints are deleted.

七、Low voltage alarm

●.When the touch fingerprint sensor is unlocked, if the blue and red light flashes, the fingerprint lock is in a low battery state. Need to be charged immediately.

八、Charging

●.The red light is on during charging and the backlight is off when full.